Names of the Components

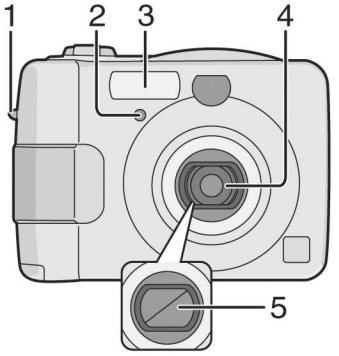

1 Strap Eyelet
2 Self-timer Indicator
3 Flash
4 Lens
5 Lens Cover

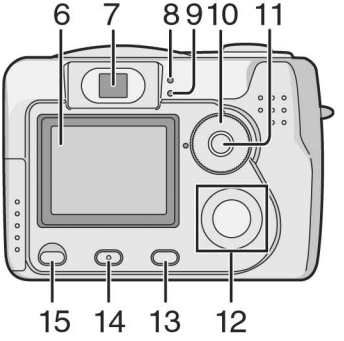

6 LCD Monitor
7 Optical Finder
8 Power Indicator
9 Status Indicator
10 Mode Dial
11 Single/Burst Mode Button
12 Cursor buttons
◀/Self-timer Button
▼/REVIEW/SET Button
▶/Flash Mode Button
▲/Exposure Compensation/
Auto Bracket/White Balance
Fine Adjustment Button
13 [MENU] Button
14 [DISPLAY] Button
15 Delete/[FOCUS] Button
(DMC-LC70)
Delete Button (DMC-LC50)

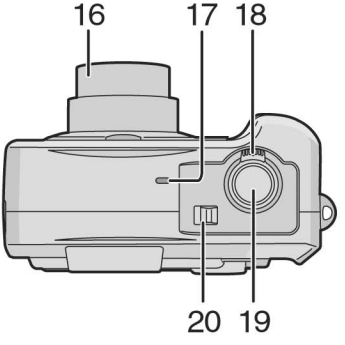

16 Lens Barrel
17 Microphone (DMC-LC70)
18 Zoom Lever
19 Shutter Button
20 Power Switch